


# Wired remote controller




**MWR-VH02**


## - Display and buttons

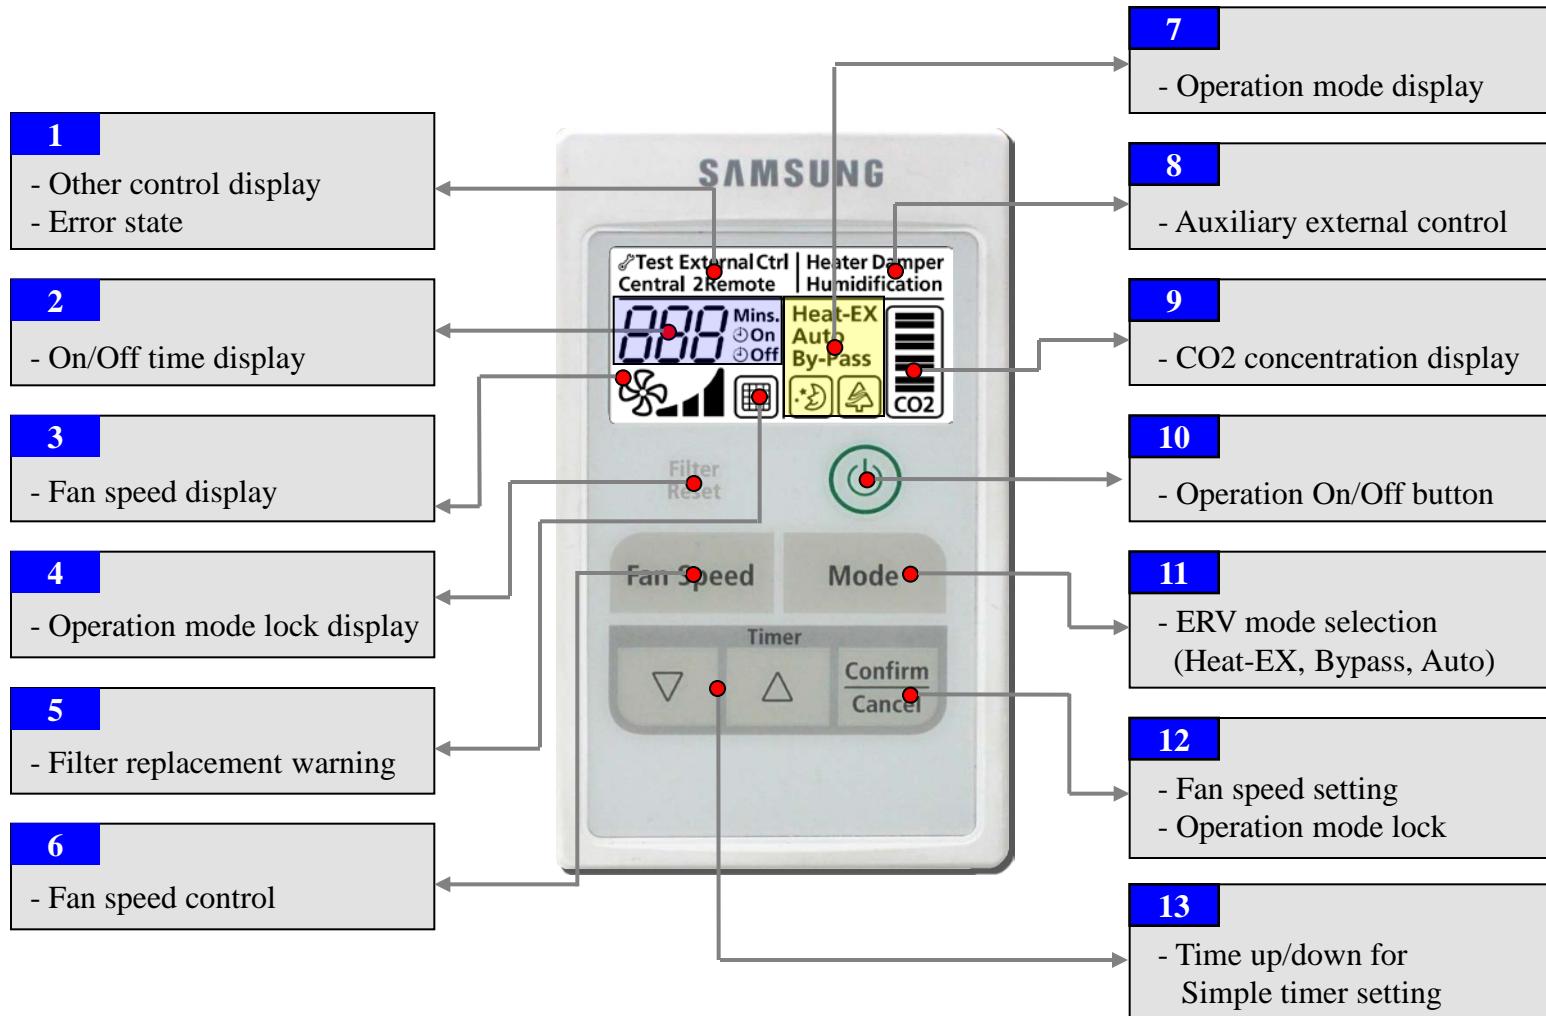


## - Switches and connectors

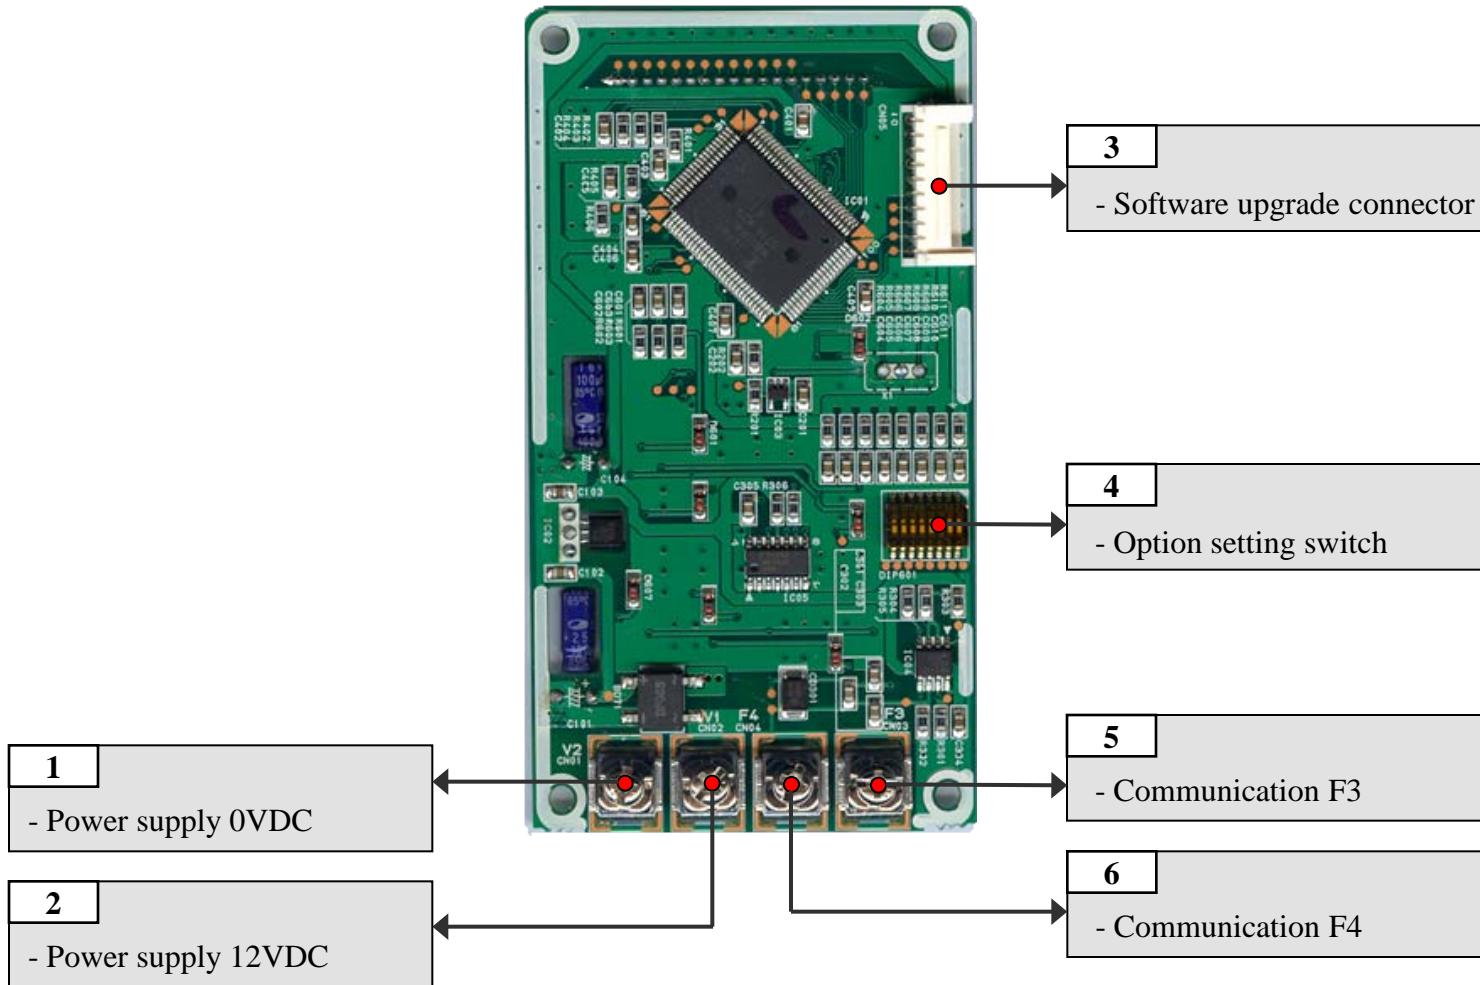


## - Dimensions

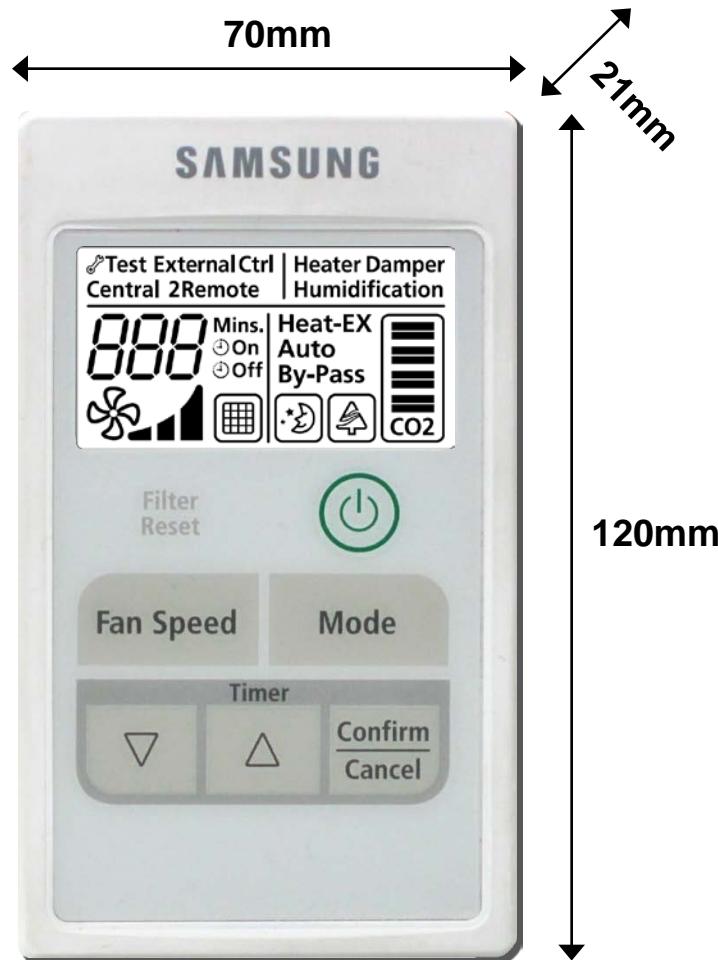


## - Installation

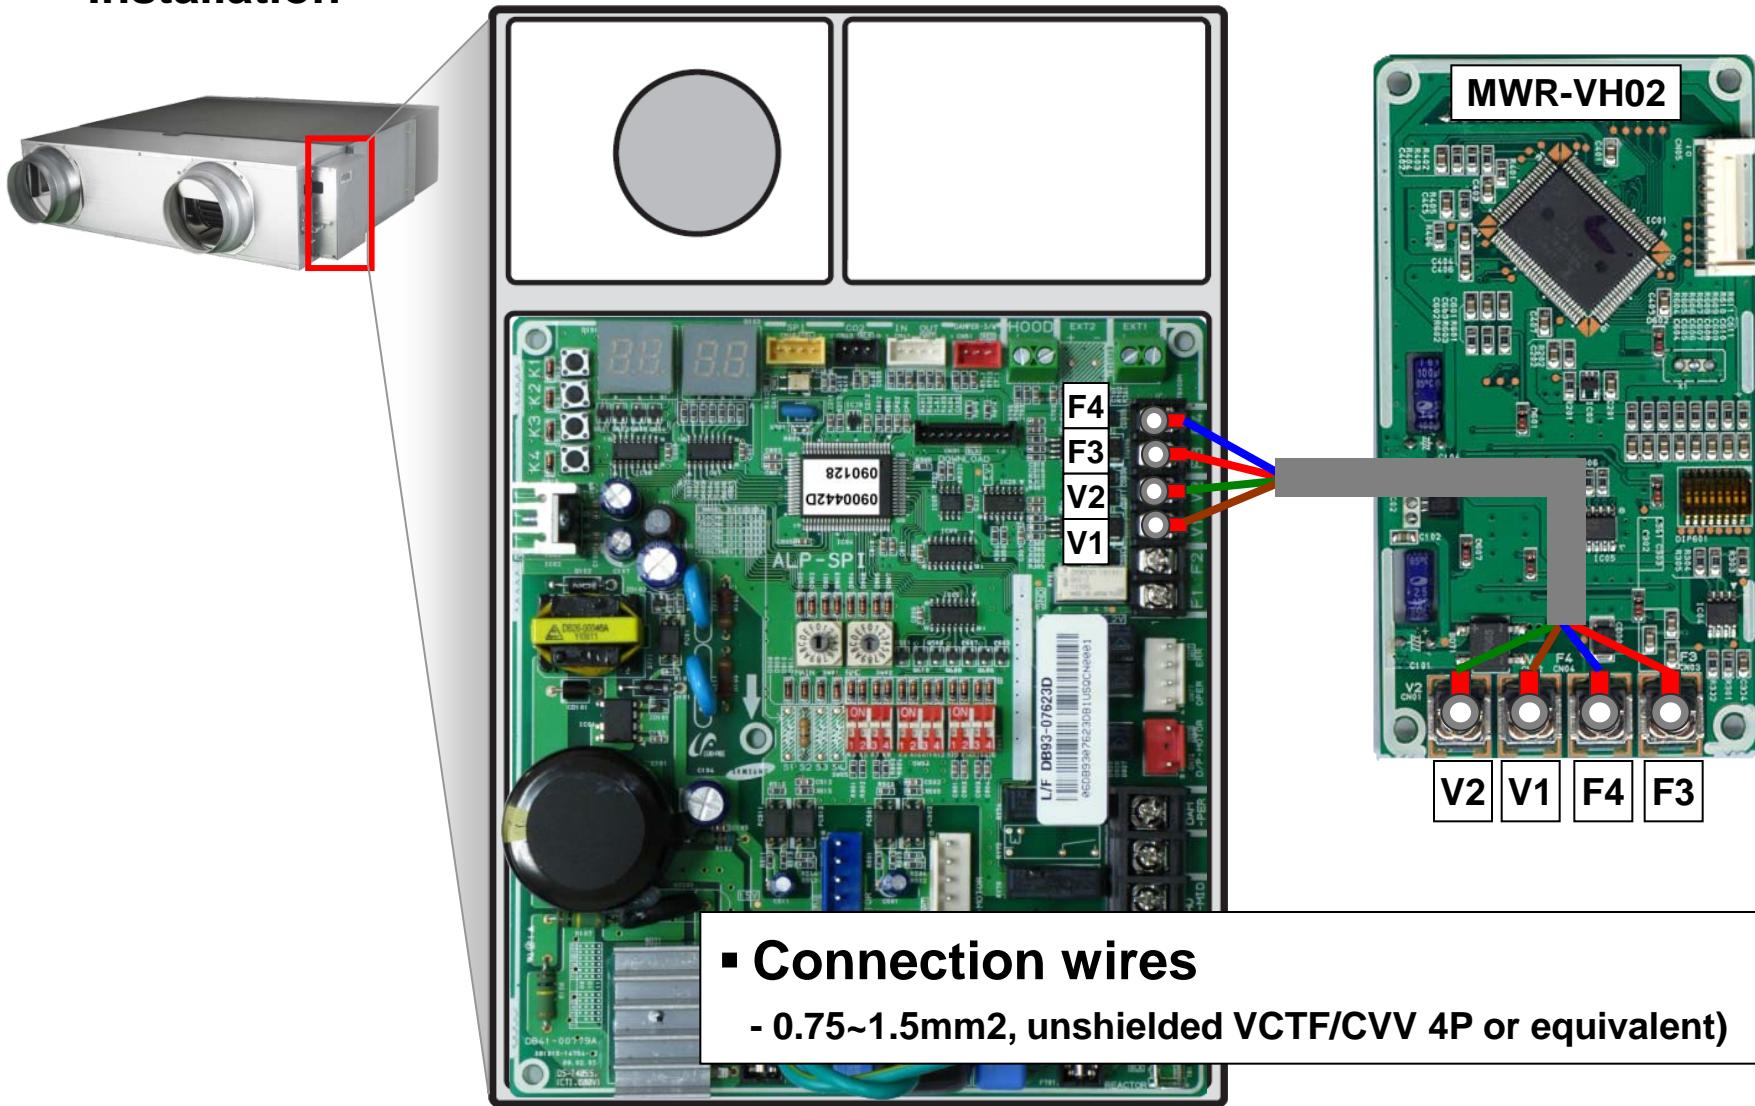

- Connection to multiple ERV units

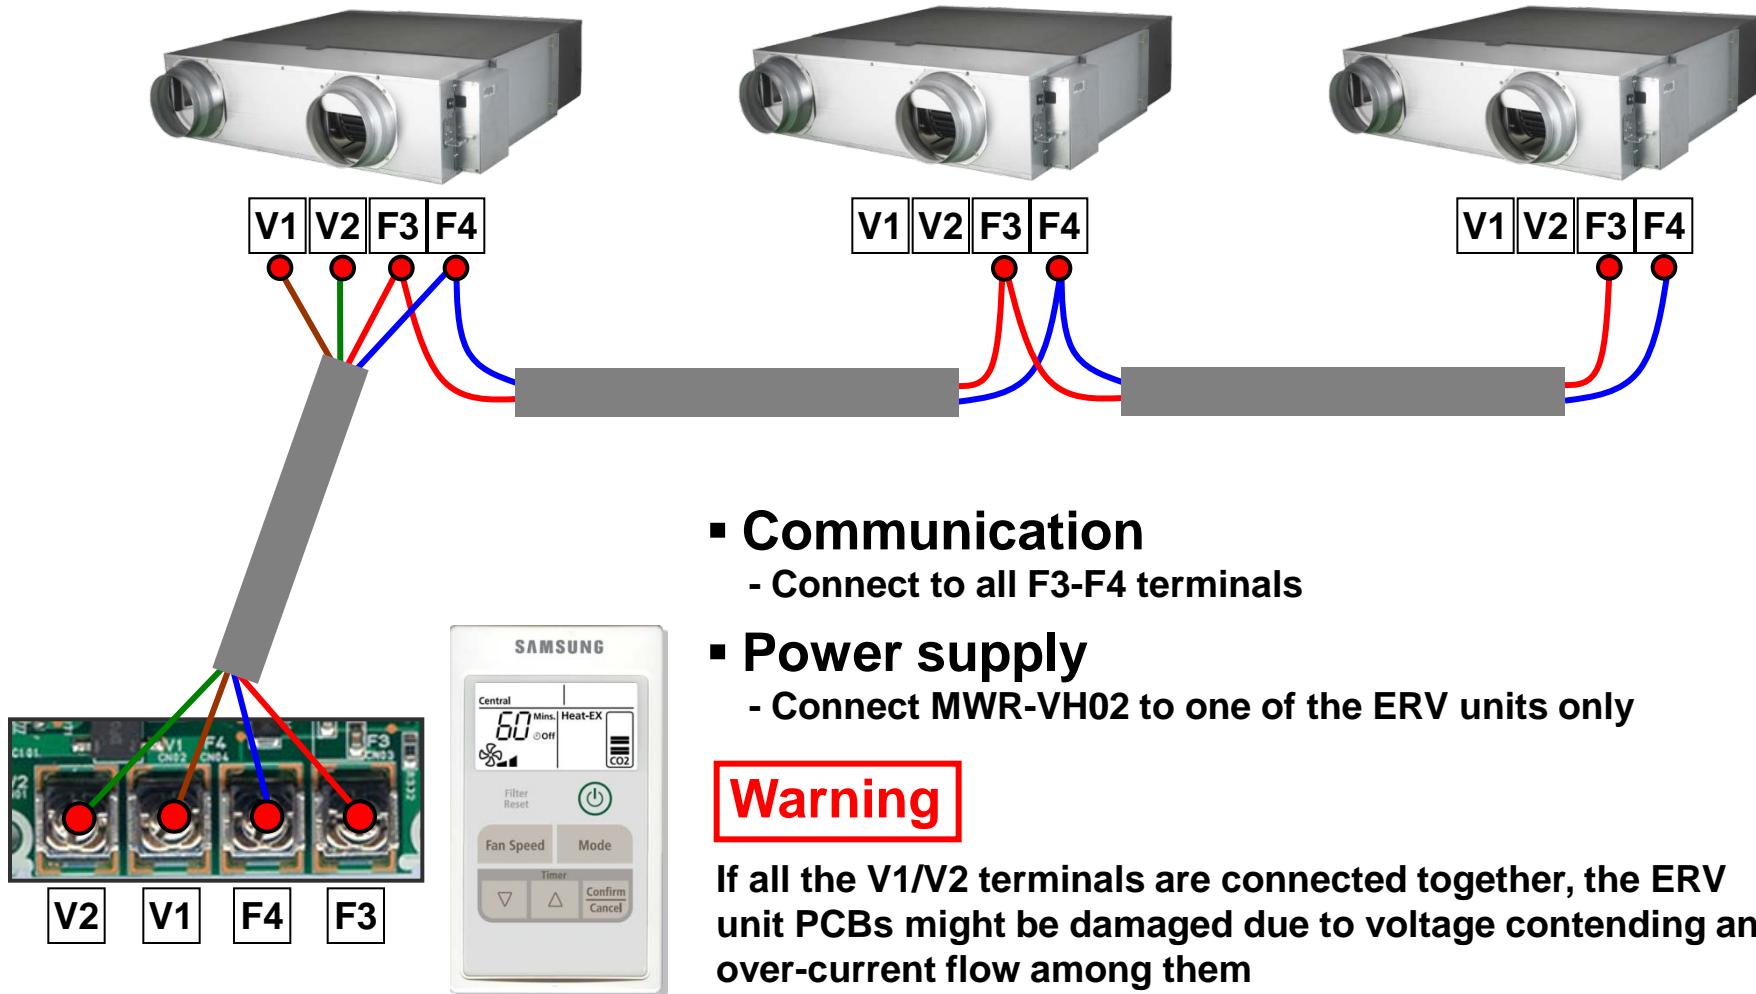


- Connection to multiple ERV units

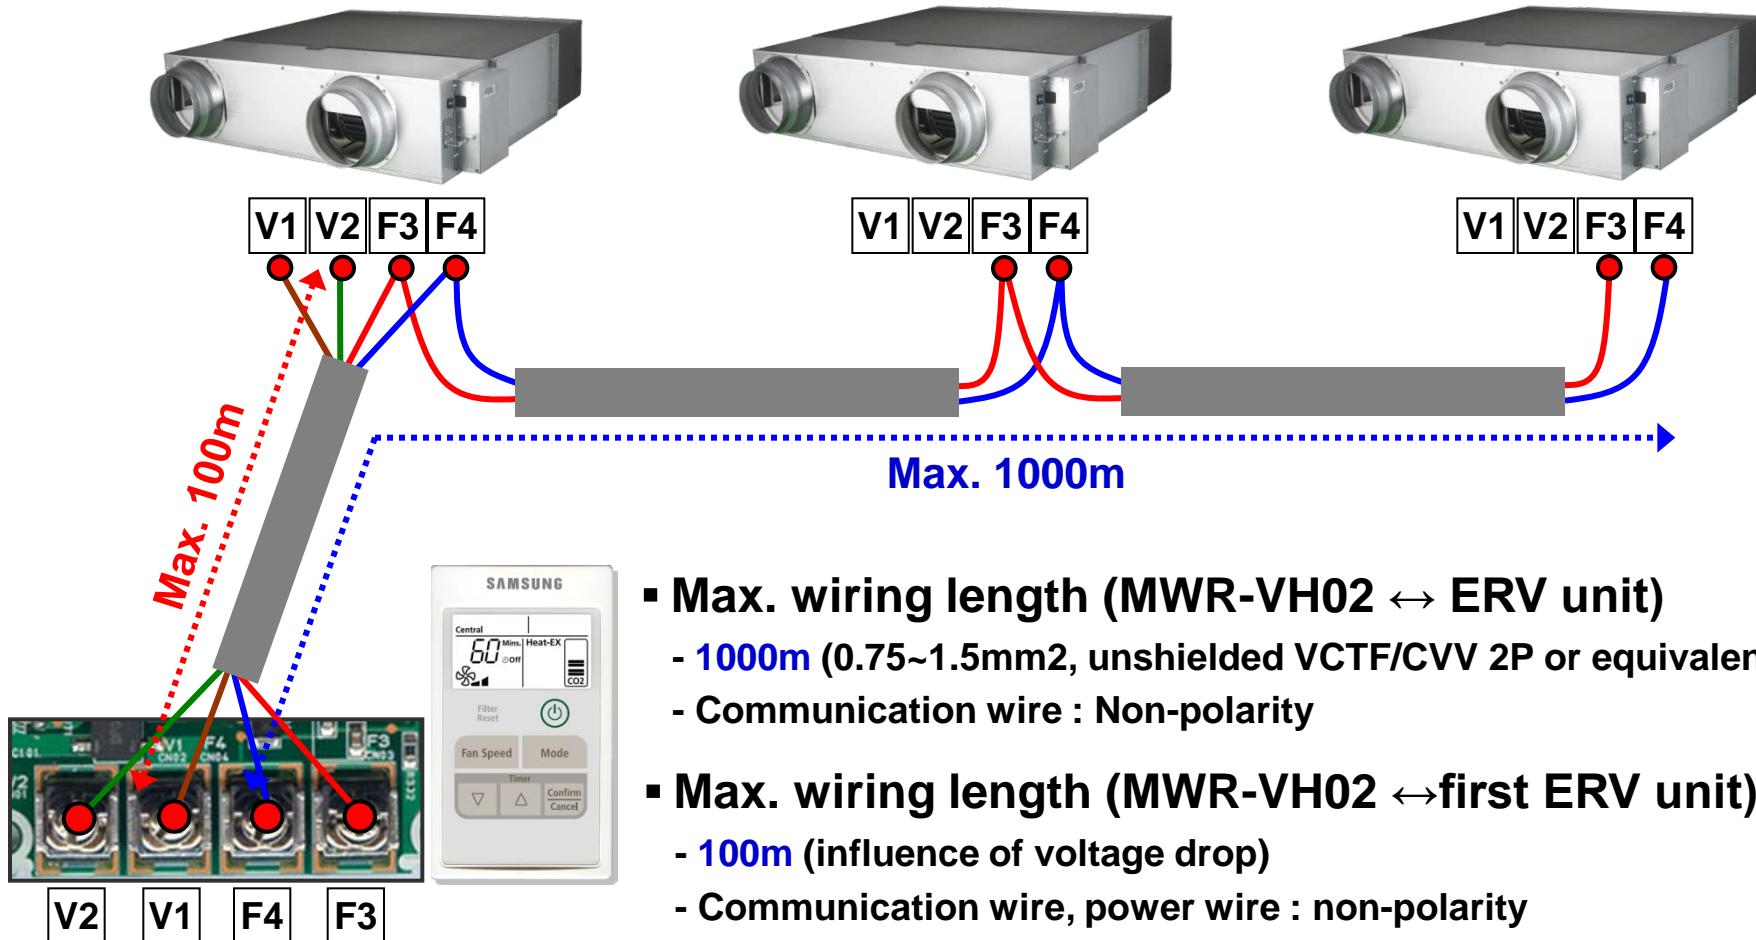


# ••• ERV wired remote controller – MWR-VH02

- No common connection of ERV unit V1/V2 terminals

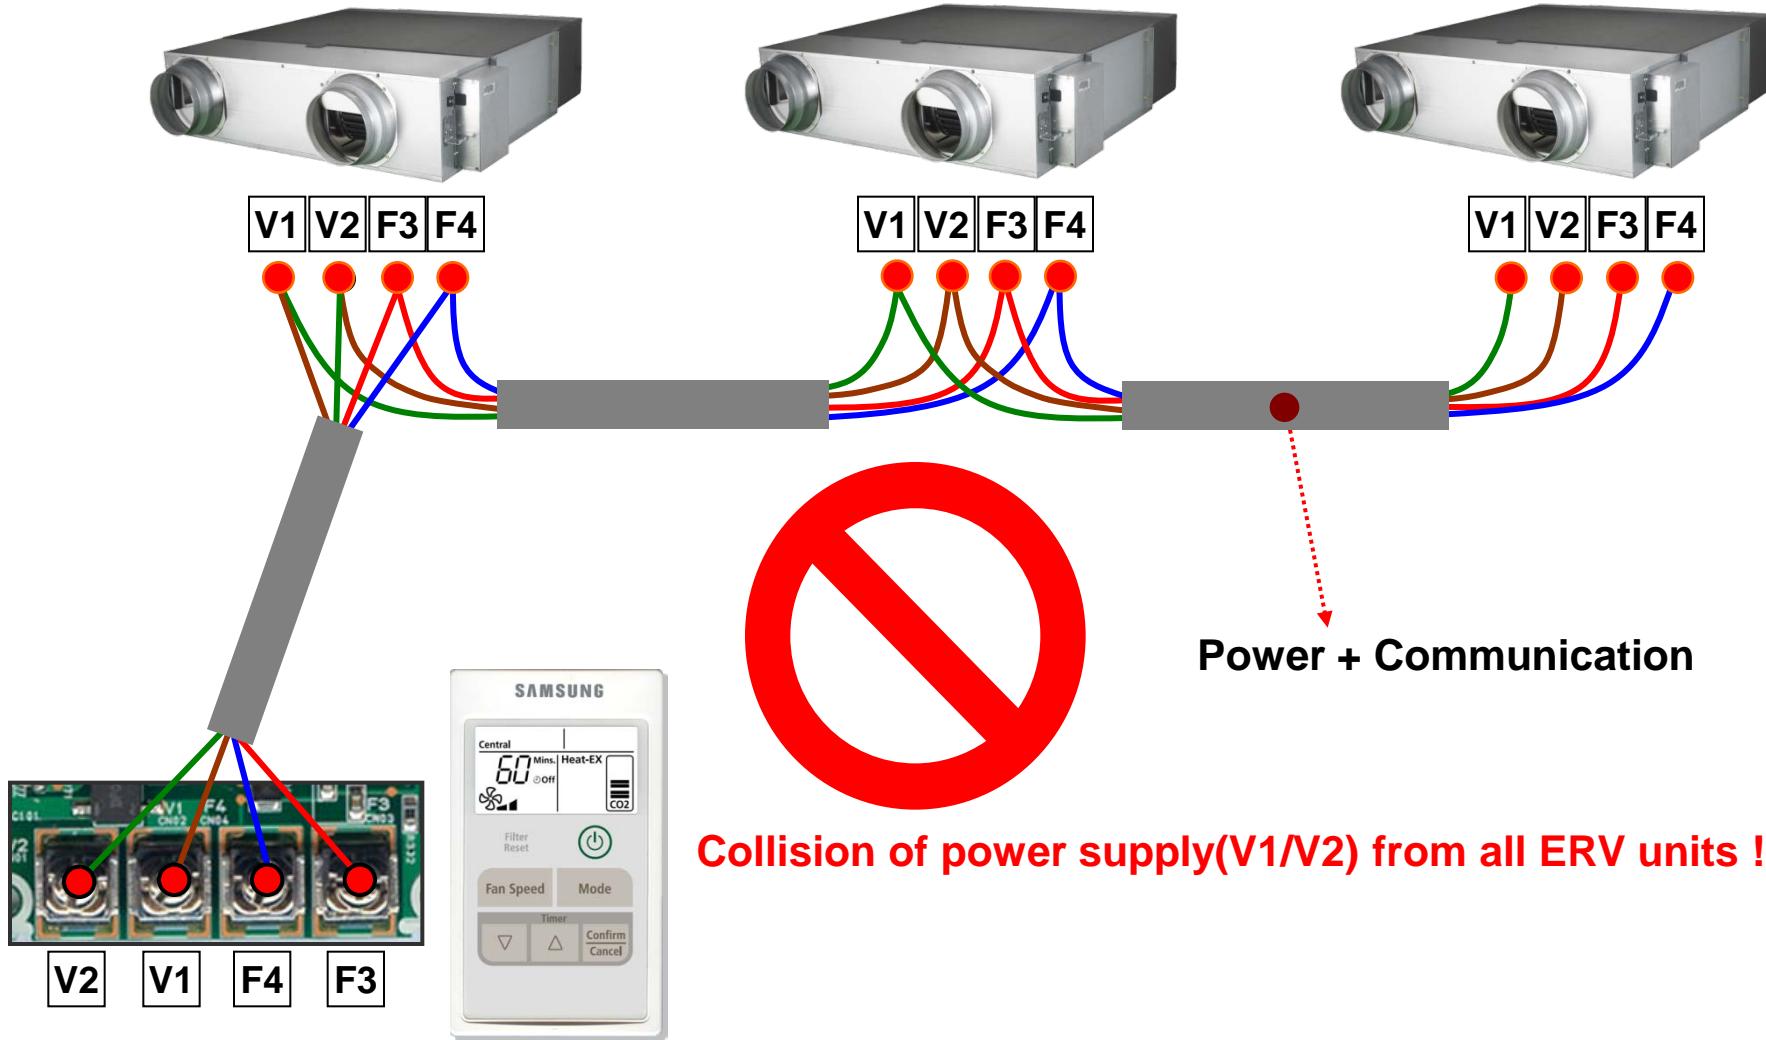


# ERV wired remote controller – MWR-VH02

- Protection against wrong power connection

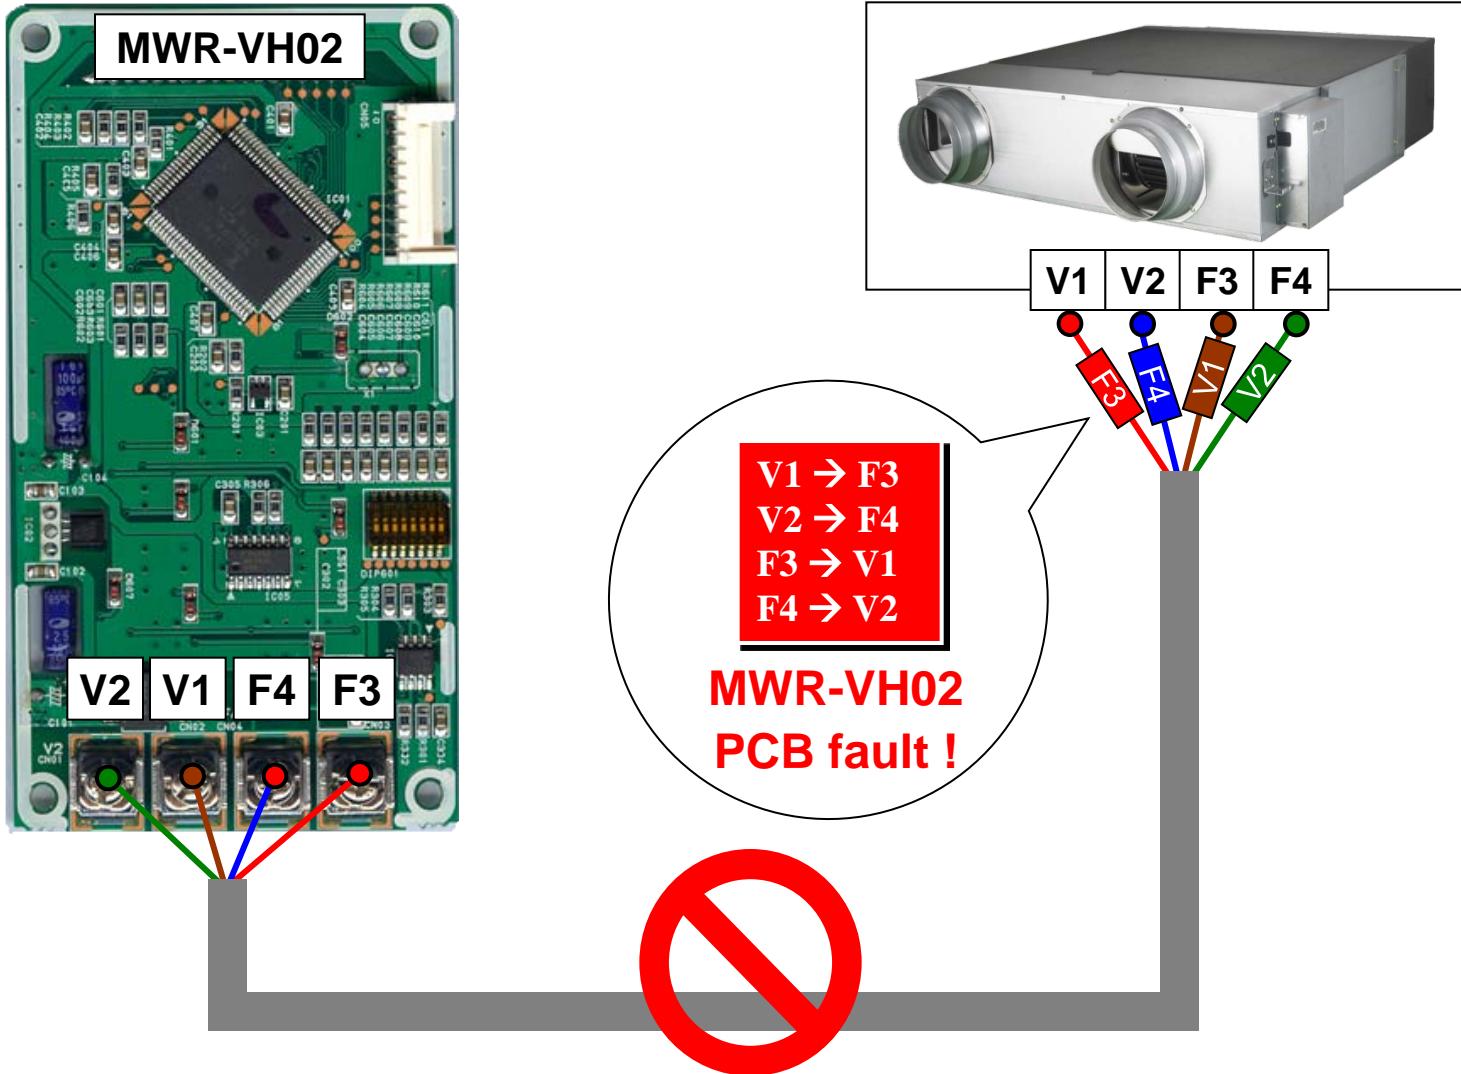




## - Option switch

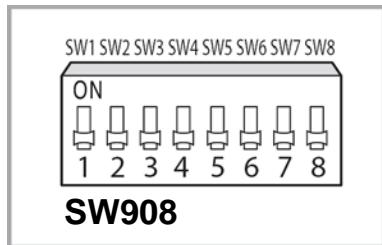

Default settings are all OFF.

No	OFF	ON
<b>SW1</b>	Auto mode disabled	Auto mode enabled
<b>SW2</b>	Air purifying mode disabled	Air purifying mode enabled
<b>SW3</b>	External control mode disabled	External control mode enabled
<b>SW4</b>	Sleep mode disabled	Sleep mode enabled
<b>SW5</b>	By-pass mode disabled	By-pass mode enabled
<b>SW6</b>	-	-
<b>SW7</b>	-	-
<b>SW8</b>	Main ERV wired control mode	Sub ERV wired control mode

## - Operation sequence display

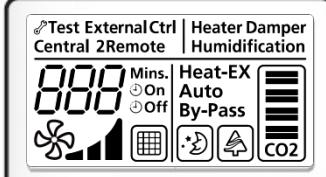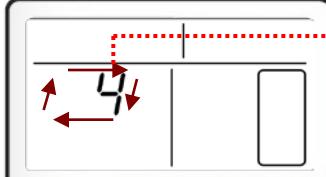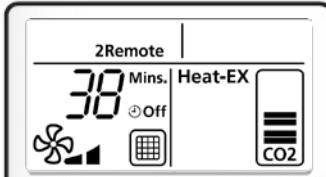Operation	Display
Power reset	 <p>All the LCD segments are ON for 1 second.</p>
Registration	 <p>Connected number of ERV units</p> <p>2 segments rotate clockwise to indicate indoor unit registration process</p>
Normal operation	 <p>Connected indoor unit state display</p>
Error	 <p>Communication error between the wired remote controller and the indoor unit.</p>

## - Wired remote control restart



- Press Fan Speed and Mode for 3 seconds to restart the operation of the Wired remote control

## - Error display & description



Error code	Description
<b>E601</b>	Communication error with ERV unit(s) for 3 minutes after tracking process
<b>E602</b>	Communication error between Main and Sub remote controller
<b>E603</b>	Communication packet corrupted
<b>E604</b>	No communication between wired remote controller and the ERV units
<b>E607</b>	2 Main remote controllers on F3-F3 communication
<b>E608</b>	No ventilators installed (No ventilators found after tracking)
<b>E609</b>	Not yet installed the external device (The external device is not yet detected after setting up the option for external device and tracking)
<b>E618</b>	- Exceeding maximum number of ERV units(16units)
<b>E621</b>	Option switch setting of Master remote controller does not match to that of Slave remote controller.