 


**SAMSUNG**

**OWNER'S INSTRUCTIONS  
MANUAL DE INSTRUCCIONES  
MANUEL D'UTILISATION  
ISTRUZIONI PER L'USO  
MANUAL DE INSTRUÇÕES  
GEBRAUCHSANWEISUNG  
ΟΔΗΓΙΕΣ ΧΡΗΣΤΗ  
ИНСТРУКЦИЯ ПОЛЬЗОВАТЕЛЯ  
Wired Remote Controller  
MWR-TH00  
MWR-TH01**

**System Air Conditioner  
Aire acondicionado sistemático  
Climatiseur numérique multifonctionnel  
Sistema Aria Condizionata  
Sistema Ar Condicionado  
Klimaanlage System  
Σύστημα Κλιματισμού  
Системный Воздушный Кондиционер**

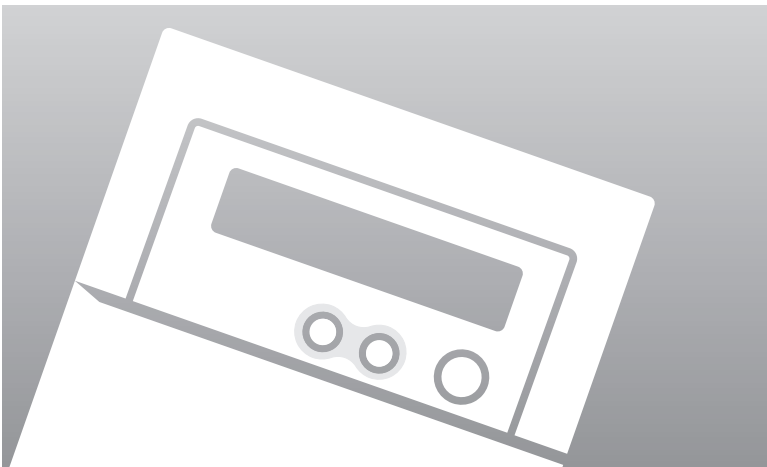

ENGLISH

ESPAÑOL

FRANÇAIS

ITALIANO

PORTUGUÊS

DEUTSCH

ΕΛΛΗΝΙΚΑ

RUSSIAN

## Safety Precautions

- *Before using the wired remote controller, read carefully this instructions.*
- *After reading the instructions, keep this owner's instructions and the installation manual in a handy and safe place. If a user is changed, you must hand over the manuals.*
- *Never attempt to install the air conditioning system or to move the wired remote controller by yourself.*



### WARNING

- ◆ Do not attempt to install or repair this wired remote controller by yourself.
- ◆ This remote controller contains no user-serviceable parts. Always consult authorized service personnel for repairs.
- ◆ When moving, consult authorized service personnel for disconnection and installation of the remote controller.
- ◆ Ensure that the wall is strong enough to support the weight of the remote controller.
- ◆ Must install the remote controller with rated power supply.
- ◆ In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.



### CAUTION

- ◆ Do not use inflammable gases near the remote controller.
- ◆ Do not spill water into the wired remote controller.
- ◆ Do not operate the remote controller with wet hands.
- ◆ Do not install the remote controller in a location where it will come into contact with the combustible gases, machine oil, sulphide gas, etc.
- ◆ Do not press buttons with a pointed thing.
- ◆ Do not pull or bend the wired remote controller cable excessively.
- ◆ Do not use this wired remote controller for other purpose.
- ◆ Do not spray an insecticide or other combustible things on the wired remote controller.
- ◆ Do not clean the wired remote controller with benzene, solvents or other chemicals.
- ◆ Do not give a shock to the wired remote controller or disassemble it by yourself.

 
# Contents

---

◆ <i>VIEW OF THE WIRED REMOTE CONTROLLER</i> .....	4
◆ <i>GETTING STARTED</i> .....	5
◆ <i>SELECTING THE AUTOMATIC OPERATING MODE</i> .....	6
◆ <i>COOLING YOUR ROOM</i> .....	8
◆ <i>HEATING YOUR ROOM</i> .....	10
<i>(EXCEPT COOLING ONLY MODELS)</i>	
◆ <i>REMOVING EXCESS HUMIDITY</i> .....	12
◆ <i>AIRING YOUR ROOM</i> .....	14
◆ <i>ADJUSTING THE AIR FLOW DIRECTION</i> .....	15
<i>(EXCEPT DUCT TYPE)</i>	
◆ <i>SETTING THE ON TIMER</i> .....	16
◆ <i>SETTING THE OFF TIMER</i> .....	18

## View of the Wired Remote Controller

The wired remote controller is installed on the wall.

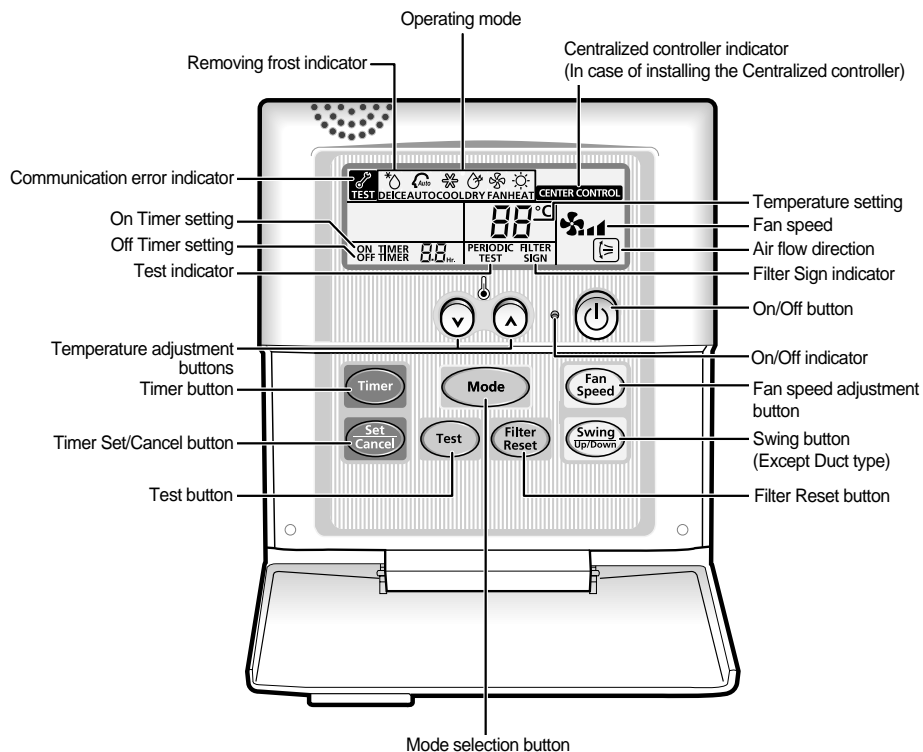

- Note**
- ◆ The **Test** button is for your installation specialist. You must NOT press it.
  - ◆ After cleaning the air filter, press the **Filter Reset** button. Then the wired remote controller will display the FILTER SIGN indicator when the time to clean the air filter.
  - ◆ Duct type air conditioner does not have function of adjusting air flow direction. Therefore, the function is not operated even if you press the **Swing Up/down** button.


# Getting Started

 *You have just purchased a wired remote controller and it has been installed by your installation specialist.*


*Your Owner's Instructions contain much valuable information on using your wired remote controller. Please take the time to read them as they will help you take full advantage of the unit's features.*

*In the manual, you will find a series of step-by-step procedures for each function available.*

*The illustrations in the step-by-step procedures use three different symbols:*

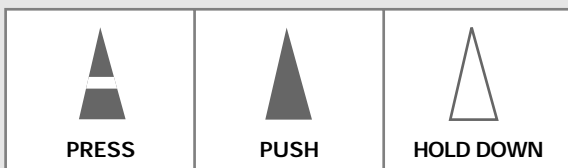

## Selecting the Automatic Operating Mode

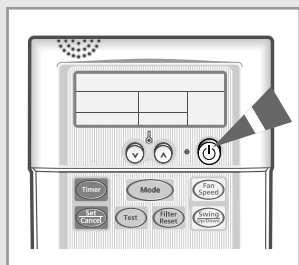 

*In the Automatic mode, the room temperature and the fan speed are controlled automatically.*

- 1 If necessary, press  (ON/OFF) button.


**Result:**



 - ◆ The On/Off indicator on the wired remote controller comes on.
- ◆ The air conditioner runs in the mode selected when the unit was last used.

**IMPORTANT** The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

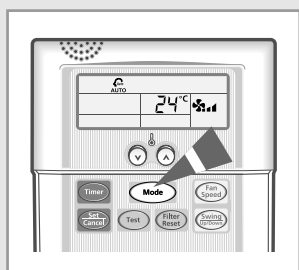

It will start up normally after three minutes.





 
- 2 To select the AUTO mode, press the  button until  is displayed at the top of the wired remote controller.

**Result:** ◆ The air conditioner runs in the AUTO mode.



**Note** ◆ You can change modes at any time.

- 3** To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.

- Result:**
- ◆ Each time you press   buttons:
    - The temperature is adjusted by 1°C.
  - ◆ The air conditioner starts cooling, provided that the room temperature is than the selected temperature.
    - The quantity of air is adjusted automatically.

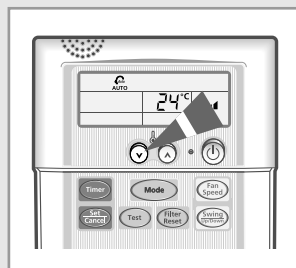

## Cooling Your Room

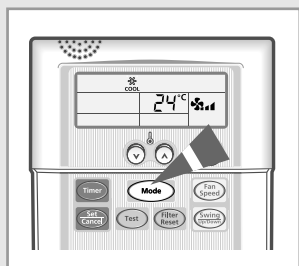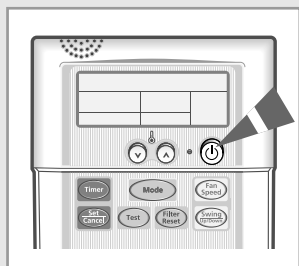  

You must select the **COOL** mode if you wish to adjust the :

- ◆ Cooling temperature
- ◆ Fan speed when cooling

1 If necessary, press  (ON/OFF) button.



**Result:**

- ◆ The On/Off indicator on the wired remote controller comes on.
- ◆ The air conditioner runs in the mode selected when the unit was last used.

**IMPORTANT** The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped



It will start up normally after three minutes.

2 To select the COOL mode, press the  button until  is displayed at the top of the wired remote controller.



**Result:** ◆ The air conditioner runs in the COOL mode.

 
**Note** ◆ You can change modes at any time.







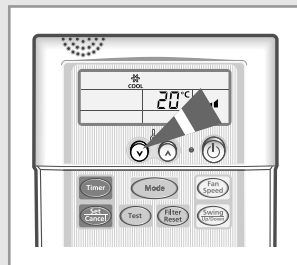

- 3 To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.


**Result:**

 - ◆ Each time you press   buttons:
  - The temperature is adjusted by 1°C.
- ◆ The air conditioner starts cooling, provided that the room temperature is higher than the selected temperature ; the fan will, however, operate.



- 4 Select the fan speed by pressing the  button one or more times until the intended value is displayed :



-  Automatic (rotated : )
-  Low
-  Medium
-  High

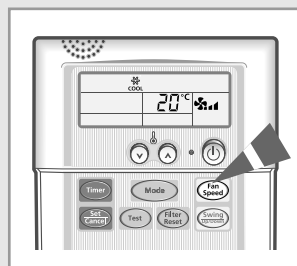

- 5 To control the direction of the air flow, refer to page 15.

## Heating Your Room (Except cooling only models)

  You can select the HEAT mode only in heat pump models.

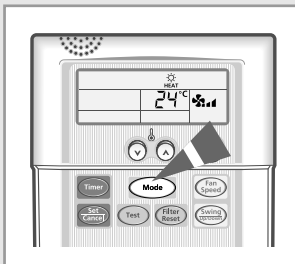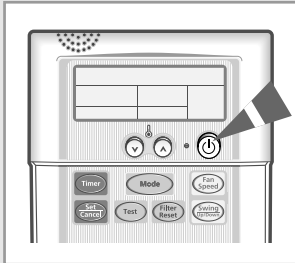

You must select the HEAT mode if you wish to adjust the :

- ◆ Heating temperature
- ◆ Fan speed when heating



1 If necessary, press  (ON/OFF) button.

- Result:
- ◆ The On/Off indicator on the wired remote controller comes on.
  - ◆ The air conditioner runs in the mode selected when the unit was last used.

**IMPORTANT** The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:



- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.



2 To select the HEAT mode, press the  button until  is displayed at the top of the wired remote controller.

 
- Result:
- ◆ The air conditioner runs in HEAT mode.


**Note** ◆ You can change modes at any time.




 



- 3 To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 16°C and 30°C inclusive.

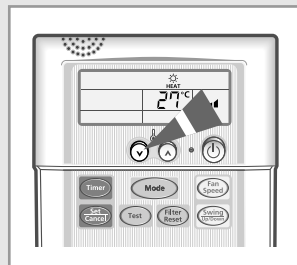
**Result:**

 - ◆ Each time you press   buttons:
  - The temperature is adjusted by 1°C.
- ◆ The air conditioner starts heating, provided that the room temperature is lower than the selected temperature ; the fan will, however, operate.



- 4 Select the fan speed by pressing the  button one or more times until the intended value is displayed :


-  Automatic (rotated :  →  → )
-  Low
-  Medium
-  High

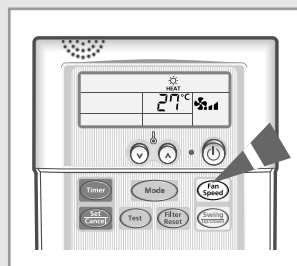

- 5 To control the direction of the air flow, refer to page 15.

## Removing Excess Humidity

 *If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.*

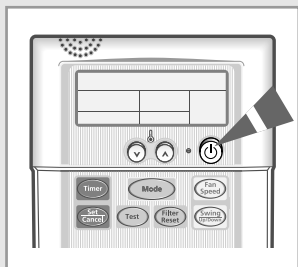

- 1 If necessary, press  (ON/OFF) button.


**Result:**



 - ◆ The On/Off indicator on the wired remote controller comes on.
- ◆ The air conditioner runs in the mode selected when the unit was last used.

**IMPORTANT** The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

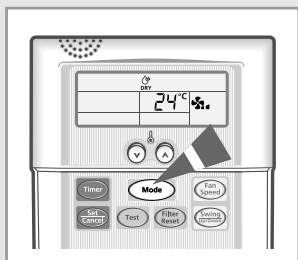It will start up normally after three minutes.





- 2 To select the DRY mode, press the  button until  is displayed at the top of the wired remote controller.

**Result:**



- ◆ The air conditioner runs in the DRY mode.

 
**Note**

- ◆ You can change modes at any time.

- 
- 3 To adjust the temperature, press the   buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.

**Result:**


- ◆ Each time you press   buttons:
  - The temperature is adjusted by 1°C.
- ◆ The air conditioner starts removing the excess humidity.  
The quantity of air is adjusted automatically.

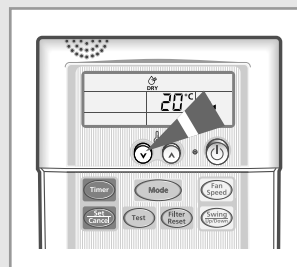

- 
- 4 To control the direction of the air flow, refer to page 15.
-

# Airing Your Room

 *If the atmosphere in your room is stale, you can air it using the FAN feature.*

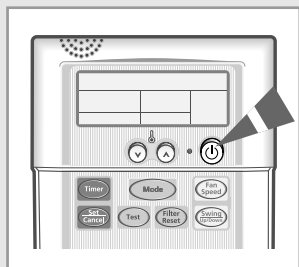

- 1 If necessary, press  (ON/OFF) button.


**Result:**



 - ◆ The On/Off indicator on the wired remote controller comes on.
- ◆ The air conditioner runs in the mode selected when the unit was last used.

**IMPORTANT** The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

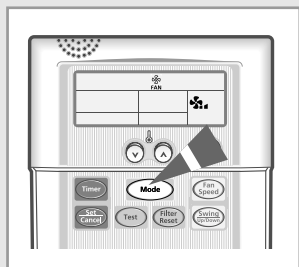
It will start up normally after three minutes.







 - 2 To select the FAN mode, press the  button until  is displayed at the top of the wired remote controller.

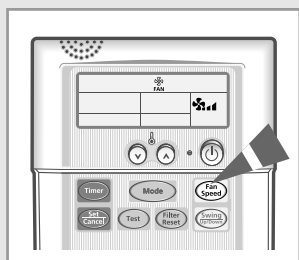**Result:** ◆ The air conditioner runs in the FAN mode.

**Note** ◆ You can change modes at any time.



- 3 Select the fan speed by pressing the  button one or more times until the intended value is displayed:

-  Low
-  Medium
-  High

- 4 To control the direction of the air flow, refer to page 15.



## Adjusting the Air Flow Direction (Except Duct Type)

 
Depending on the position of the indoor unit, you can adjust the position of the air flow blade, thus increasing the efficiency of the air conditioner.

- 1 Press the  button.

**Result:** The blade is moving between up and down.


**IMPORTANT** When the air conditioner is first turned on, the blade is moved.

- 2 To stop the blade, press the  button again.  
To set to the required position, press the  button again when the blade is in the required position.

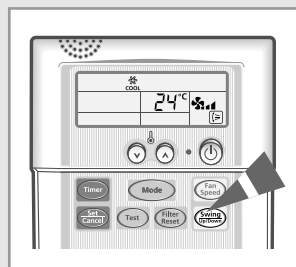


## Setting the On Timer

 *The On Timer enables you to switch on the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours. You can select the On Timer only when the air conditioner is off.*

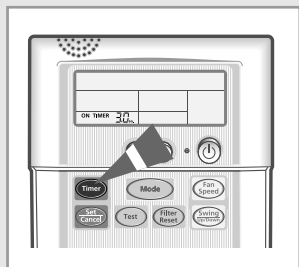

 - 1 To set the operating time, press the **Timer** button one or more times until the required time is displayed. Possible time is between 0.5 hour and 24 hours inclusive.

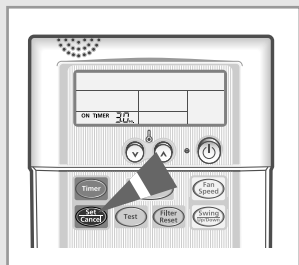

- 2 Press the **Set/Cancel** button to complete the setting.

Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The selected mode and the temperature disappear on the display after 5 seconds.
- ◆ The air conditioner will switch on automatically when the counter displayed on the remote controller reaches the setting time as disappearing the On timer setting.


*Note*


- ◆ You can see or change the setting mode and/or the temperature by pressing the **Mode** button or the **↓** **↑** buttons after setting the On timer.



## ■ To Cancel the On Timer

 
- 1 Press the  button.

**Note** ◆ If you want to turn on the air conditioner before the timer reaches the setting time, press the  button.

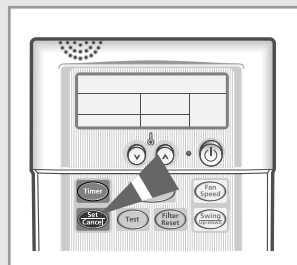


## Setting the Off Timer

 *The Off Timer enables you to switch off the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours. You can select the Off Timer only when the air conditioner is on.*

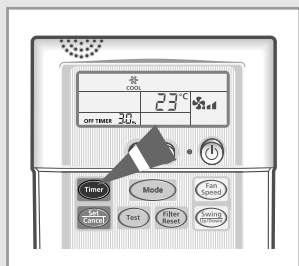

 - 1 To set the operating time, press the **Timer** button one or more times until the required time is displayed. Possible time is between 0.5 hour and 24 hours inclusive.

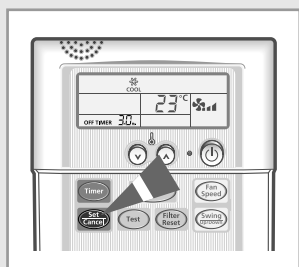


- 2 Press the **Set/Cancel** button to complete the setting.


**Result:**

 - ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch off automatically when the counter displayed on the remote controller reaches the setting time as disappearing the Off timer setting.

## || To Cancel the Off Timer

- 1 Press the  button.

**Note** ◆ If you want to turn off the air conditioner before the timer reaches the setting time, press the  button.

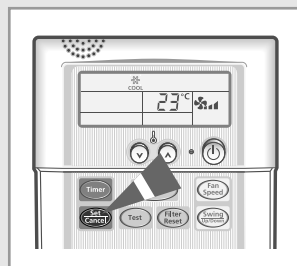

**THIS AIR CONDITIONER IS MANUFACTURED BY:  
ESTE AIRE ACONDICIONADO HA SIDO FABRICADO POR:  
CE CLIMATISEUR EST FABRIQUE PAR:  
QUESTO CONDIZIONATORE D'ARIA È PRODOTTO DA:  
ESTE APARELHO DE AR CONDICIONADO É FABRICADO POR:  
DIESE KLIMAANLAGE IST FABRIZIERT VON:  
ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΚΑΤΑΣΚΕΥΑΣΤΗΚΕ ΑΠΟ:  
ЭТОТ КОНДИЦИОНЕР ИЗГОТОВЛЕН ФИРМОЙ:**



**ELECTRONICS**